


Canopy / Exterior lights on in daytime



- 2 1. Are the 5 red buttons depressed and lit up? If so, the lights are in manual bypass. To turn off depress the buttons.
2. Press the red square button. This will turn off the times bypass.
3. View the main screen on the Zelio Logic controller. If the bottom number are highlighted then the unit is calling for the lights to be on.
4. Press and hold the ◀ left arrow button on the Zelio Logic controller. The number will show the candlelight level (between 0 and 255) that the light sensor is seeing.
 1. If 00000 then it is showing complete dark.
 2. If 00255 then it is showing bright daylight.

1

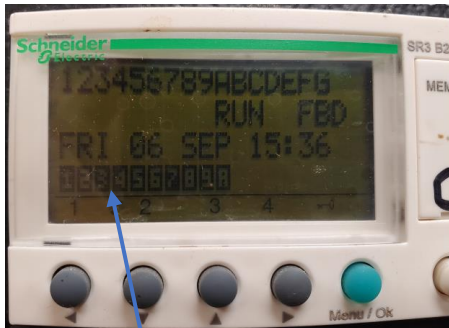

3



4

5. To check the light sensor for operation (typically located on rooftop or back of building)
 1. Place a rag, bucket or box over the light sensor (ensure sensor is completely covered).
 2. Press the ◀ left arrow on the Zelio Logic controller. Did the light level change a significant amount (50 or more)? If so the sensor is working properly.


6. Check programming *note values may be slightly different than those listed*

1. Press "Menu / OK" on Zelio Logic controller
 1. If password is required it is 1000
2. Press the ▲ up arrow until the top number goes to R00B001 and check the light sensitivity level indicated, press the ▲ up arrow again for R00B002 and so on. The levels should be set to the following (Note: the number must be positive)

R00B001	C=+00125	R00B002	C=+00100
R00B003	C=+00075	R00B004	C=+00100
3. To change the light level on any of the settings, while viewing the sensitivity level press the ▶ right arrow once, the value in C will flash. Using the Up and Down arrows, adjust the light level as needed. Once the number is set, press the "Menu / OK" button to save.
4. Once completed with all changes press the "Menu / OK" button to return to the main screen.



5

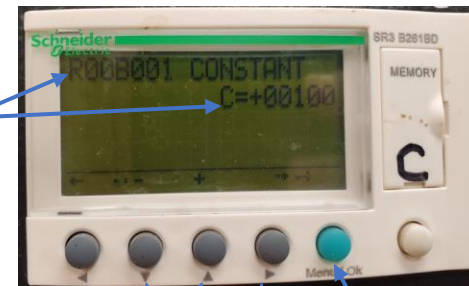

6.2

6.2
6.3

6.3

6.1